

РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ

- 2 AS БУТИЛКИ 500 ML, 700 ML
без BPA
- SS304 - ОСТРИЕТА ОТ
НЕРЪЖДАЕМА СТОМАНА
- ВГРАДЕНА ЗАЩИТА
- ПРИСТАВКИ ЗА БЛЕНДИРАНЕ
И ПРИСТАВКА ЗА СМИЛАНЕ
НА ЯДКИ, СЕМЕНА, ПОДПРАВКИ
- МОТОР-ОСНОВА,
КАПАК ЗА ДИРЕКТНО ПИЕНЕ,
КАПАК ЗА СЪХРАНЕНИЕ



Мощност: 700 W
Захранване:
220-240V, 50-60Hz

Безшумен Мотор
20000 RPM

ПРЕДИ ДА ЗАПОЧНЕТЕ РАБОТА С УРЕДА, ПРОЧЕТЕТЕ ВНИМАТЕЛНО ТОВА РЪКОВОДСТВО НА ПОТРЕБИТЕЛЯ.

Артикул: НУТРИ БЛЕНДЕР

Модел: ЕК-2727



ОСНОВНИ ПРАВИЛА ЗА БЕЗОПАСНОСТ

Преди да използвате уреда, прочетете внимателно това ръководство за употреба. То съдържа важна информация за Вашата безопасност, както и указания за експлоатация и поддържане.

Пазете настоящата инструкция за допълнителни справки в бъдеще. Спазването на изискванията в нея ще осигурят Вашата безопасност и правилната функционалност на уреда. Това е едно от задължителните гаранционни условия.

Ние не поемаме гаранция и отговорност за повреди и щети причинени от не спазване на изискванията в настоящата инструкция. Ако предадете този уред на трета страна, трябва да връчите и това ръководство за употреба.

Когато използвате някакъв електроуред — особено, ако това става в присъствието на деца, основните правила за безопасност трябва винаги да бъдат спазвани, включително в тези, изброени по-долу:

- Пазете уреда от вода! Не го използвайте близо до или над вода; близо до вани, душ-кабини, басейни, мивки или други съдове, съдържащи вода. Не използвайте уреда на открито, където може да се намокри (дъжд, пръски вода т.н.)
- Изключвайте електроуредата от контакта, преди да го почистите.
- Изключвайте електроуредата от контакта, след като сте свършили работа с него.
- Никога не оставяйте електроуредата на място, от където може да падне или да попадне в мивка.
- Не докосвайте електроуред, който е паднал във вода. Незабавно го изключете от контакта.
- Не работете с уреда с мокри ръце или застанали върху мокър под. Не пипайте щепсела с мокри ръце.
- Уредът, не трябва да се оставя без наблюдение, когато включен в захранващата мрежа.
- Дръжте уреда извън обсега на деца! Децата трябва да бъдат наблюдавани, за да не си играят с уреда.
- Уверете се, че напрежението на захранващата ви мрежа отговаря на посоченото върху уреда или на описаното в това ръководство.
- Никога не оставяйте електроуредата на място, от където може да падне и да се повреди.
- Използвайте този електроуред само според предназначението му, като спазвате точно инструкцията. Не използвайте приспособления и приставки, които не са препоръчани или предоставени от производителя.
- Този уред не е предназначен за използване от лица (включително деца) с ограничени физически, сетивни или умствени способности, или с недостатъчен опит и обучение, освен ако те са наблюдавани или инструктирани относно използването на уреда от лице, отговорно за тяхната безопасност.
- Проверявайте редовно състоянието на захранващия кабел и щепсела.
- Ако, захранващия кабел или щепсела се повреди, той трябва да бъде заменен от вносителя, негов сервизен представител или лице с необходимата квалификация, за да се избегне опасност. Не разглобявайте уреда и не го поправяйте сами.
- Пазете захранващия кабел от допир с горещи повърхности и остри предмети.
- Не дърпайте и не огъвайте захранващия кабел.
- Никога не удължавайте захранващия кабел на уреда.
- Не оставяйте без надзор, когато уредът се използва от, върху или в близост до деца или хора с увреждания.
- Не използвайте уреда, ако чувствате сънливост.
- Никога не пускайте и не пхайте предмети в отворите на уреда, тъй като това действие може да доведе до поражение от електрически ток.
- Не използвайте уреда на открито или на места, където са използвани аерозолни продукти (спрейове). Не работете с уреда на места с наситена кислородна атмосфера.

ДОПЪЛНИТЕЛНИ СЪВЕТИ ЗА БЕЗОПАСНОСТ

- Прекарвайте кабелите по безопасен начин, така че да не се спъвате в тях.
- Не изваждайте щепсела от контакта с дърпане за кабела.
- Включвайте щепсела в лесно достъпен контакт, така че в случай на авария, уредът да може да се изключи незабавно от електрическата мрежа.
- Изваждайте щепсела от контакта, когато искате напълно да изключите уреда.
- Уредът, е под напрежение, когато се свърже с електрическата мрежа.
- Ако кабелът прегрее, спрете използването на уреда и извадете щепсела от контакта.
- Не ползвайте уреда, ако някоя от частите му е повредена по някакъв начин.

Проверявайте уреда винаги преди да започнете да го ползвате, за да сте сигурни, че всичко с него е наред.

- Не подменяйте компонентите на този уред, за да не се излагате на измислен риск. Този уред не съдържа части, които могат да бъдат заменени
- При първоначалното използване на уреда, може да се отдели малко дим и да се усети мириса на изгоряло. Това е нормално за нови електроуреди, и ще изчезне след извесна работа на уреда.
- Забранено е дезинфекциране на частите на уреда с вряла вода или пара с висока емпература.
- По време на работа на уреда, никога не оставяйте уреда без наблюдение.
- Този уред не се управлява от таймер или дистанционно управление.

Проверете захранващото напрежение, посочено върху уреда, дали отговаря на напрежението на захранващата мрежа!

- Не докосвайте остриетата с ръка или някакъв кухненски прибор, докато те се въртят.
- Никога не мийте основния корпус на уреда с течаща вода. Не го потапяйте във вода или други течности.
- Не използвайте уреда продължително време. Не допускате моторът да прегрее и не нарушавате препоръчаната цикличност на работа.

Не позволявайте уредът да работи повече от 3 минути, без почивка!

Ако не сте завърши обработването след 3 минути, изключете уреда и го оставете да се охлади до стайна температура (около 10 мин.), преди да го пуснете отново. Предпазвайте мотора от прегряване.

- Винаги поставяйте уреда върху твърди и равни повърхности, за да е максимално устойчив.
- Режещото острие е изключително остро. Бъдете внимателни!
- Никога не включвайте уреда, когато е частично или напълно разглобен. Изключете уреда от мрежата, когато отделите каната от тялото.
- Никога не отделяйте каната от тялото на уреда, преди острието да е спряло да се върти.
- Пълнете каната до указаното максимално количество. Никога не използвайте уреда, ако каната е пълна догоре с течност.
- Не пускайте уреда, ако каната е празна.
- Не поставяйте в каната продукти с температура по-голяма от 80°C.

Уредът, е предназначен за фино пюриране, кълцане и смесване. С този уред можете да се подготвите супи, сосове, млечни шейкове и други. Можете също така да използвате уреда за обработване на зеленчуци, плодове и месо.

При нарязване на много твърди продукти (кафе, лед и други), има опасност, остриетата да се затъпят по-бързо.

Вградена защита: Тази функция гарантира, че можете да включите уреда само, ако сте сглобили правилно каната върху задвижващия блок. Ако каната е правилно сглобена, вградената защитна блокировка ще бъде отключена.


Уредът е предназначен само за домашна употреба!

АРТИКУЛ: НУТРИ БЛЕНДЕР

МОДЕЛ: ЕК-2727



ОПИСАНИЕ НА УРЕДА

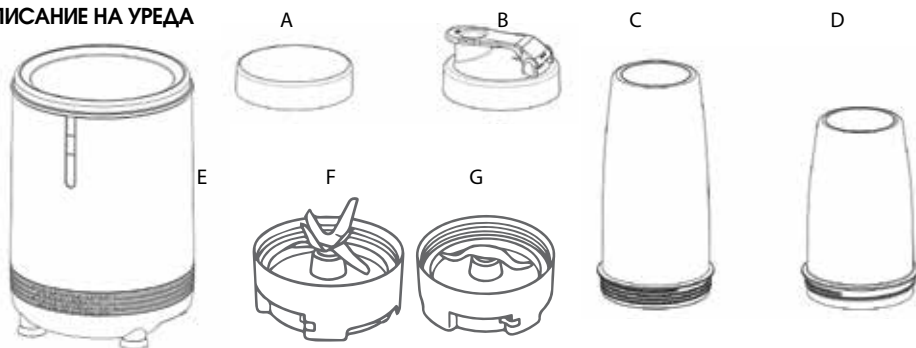

A - Капак за съхранение

B - Капак за директно пиене

C - Купа 700 мл

D - Купа 500 мл

E - Мотор-база

F-Приставка за блендиране

G-Приставка за смилане

ПОДГОТОВКА НА УРЕДА ЗА РАБОТА

МОЛЯ, ИМАЙТЕ ПРЕДВИД ТЕЗИ ВАЖНИ ПРЕДПАЗНИ МЕРКИ, КОГАТО ИЗПОЛЗВАТЕ УРЕДА:

ВАЖНО: Приставките са взаимозаменяеми.

ВНИМАНИЕ: Ножовете са остри! Бъдете изключително внимателни, когато боравите с ножовете. Винаги ги гръжте за основата им. **ВАЖНО:** Никога не пускайте уреда празен.

ВНИМАНИЕ: Никога не се опитвайте да извадите каната, докато уредът все още работи.

ПРЕДУПРЕЖДЕНИЕ: Никога не оставайте уреда без надзор, докато е в употреба.

ИЗПОЛЗВАНЕ НА УРЕДА


1. Отстранете всички опаковъчни материали и етикети от уреда.
2. Измийте капачите, бурканите и приставките в топла сапунена вода с мека кърпа. Бъдете внимателни, когато миете ножовете, тъй като те са много остри.
3. Изплакнете и подсушете добре.
4. Бурканите, капачите и приставките са подходящи за съдомиялна машина. Препоръчително е капачите и приставките да се поставят на горната решетка. Уверете се, че приставките са извадени от бурканите, преди да ги поставите в съдомиялната машина.
5. Избършете основата на двигателя с влажна кърпа.

РАБОТА С УРЕДА

ВАЖНО: Уверете се, че основата на двигателя е включена в контакта за употреба.

1. Поставете основата на двигателя върху чиста, суха и равна повърхност, като плот или маса.
 2. Уверете се, че уредът е изключен от контакта.
 3. Добавете съставките в каната.
 4. Поставете острието върху каната и го завъртете плътно, докато се получи добро уплътнение. (Фиг. 2)
 5. Обърнете каната с главата надолу и го поставете върху основата на двигателя, като подравните етикетата на каната с основата на двигателя. Завъртете го по часовниковата стрелка, уредът е готов за употреба. (Фиг. 3)
 6. Когато достигнете желаната консистенция, спрете уреда, като завъртите каната обратно на часовниковата стрелка (Фиг. 4) и издърпайте право нагоре, за да я извадите (Фиг. 5).
- ЗАБЕЛЕЖКА:** Не преплъвайте! За да избегнете разливане, не добавяйте съставки след линията за

СГЛОБЯВАНЕ И РАЗГЛОБЯВАНЕ НА УРЕДА

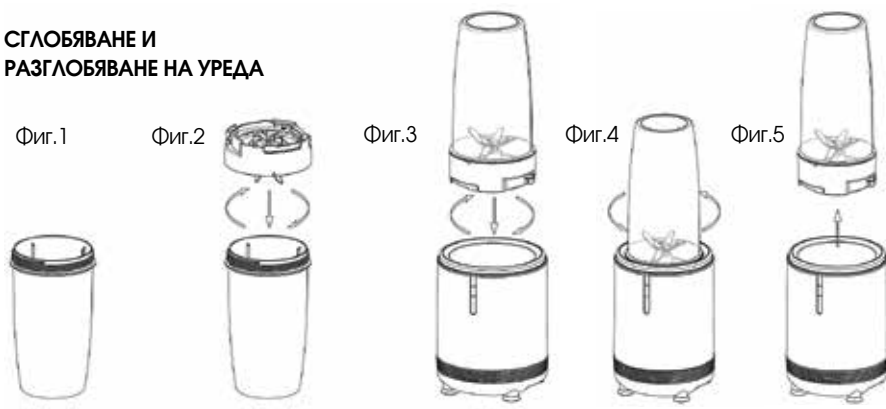

пълнене „Max„.

7. Обърнете каната изправена и извадете ножовия блок, като го завъртите обратно на часовниковата стрелка. Не забравяйте да съхранявате ножовия блок, прикрепен към празен буркан, когато не го използвате.

8. Поставете капака Sip & Seal върху буркана, завъртете го, за да го затворите, и се насладете!

9. Уверете се, че основата на двигателя е изключена от контакта, когато не го използвате.

ХАРАКТЕРИСТИКИ ЗА БЕЗОПАСНОСТ!

Вградена предпазна ключалка

Блендерът има вградена предпазна ключалка, която гарантира, че можете да включите уреда само когато чашата и ножовият блок са здраво сглобени върху основата на двигателя. Ако уредът е правилно сглобен, вградената предпазна ключалка ще бъде отключена.

ВАЖНО: В основата на всяко острие има силиконово уплътнение, което създава херметично прилягане към буркана. След миене на съдомиялни машини и преди всяка употреба винаги проверявайте дали уплътнението е правилно поставено, тъй като топлината от някои съдомиялни машини може да доведе до разхлабване на уплътнението.

ПРЕДУПРЕЖДЕНИЕ: Не работете с двигателя непрекъснато повече от 60 секунди. Оставете двигателя да почине 180 секунди, преди да продължите.

ЗАБЕЛЕЖКА: Ако ножът не се върти гладко, спрете продукта и добавете малко течност или намалете количеството съставки в чашата.

ЗАБЕЛЕЖКА: За да предотвратите прегряване на продукта, сухите съставки не трябва да се обработват повече от 30 секунди наведнъж.

ПОЧИСТВАНЕ НА УРЕДА

- Не потапяйте уреда във вода. Пазете го далеч от съдове с вода, душеве и други. Миялни машини. Не позволявайте вода или друга течност да проникне в тялото на уреда.

- Изключете уреда от контакта, преди да го почиствате. Никога не изключвайте уреда, като дърпате за кабела, а за щепсела.

- Оставете уреда да се охлади напълно, преди да го почиствате.

- Избършете всички остатъци от храна или мазнини от тялото на уреда с кухненска хартия. Може да използвате леко влажна кърпа.

- Измийте каната с топла вода и препарат за съдове, както обикновен домакински съд/прибор. Подсушете я добре.

- Полепналите по острието продукти, лесно могат да се отстранят с помощта на малка четка за съдове (не е включена в комплекта).

- Възможно е някои оцветители в продуктите да оцветят каната, това е нормално и няма да окаже ефект върху качествата на елементите на уреда, или върху вкуса на продуктите.

- Измийте предварително продуктите, които могат да се мият, преди да ги поставите в каната на уреда.

- Почиствайте уреда веднага след използването му.
- Не използвайте силно абразивни или агресивни препарати.

ВЪЗМОЖНИ ПРОБЛЕМИ И РЕШЕНИЯ

ПРОБЛЕМ	ВЪЗМОЖНА ПРИЧИНА И РЕШЕНИЕ
Моторът не стартира или приставката не се върти	За бурканите се уверете, че езичетата са поставени в слотите и са завъртяни по часовниковата стрелка
Храната е неравномерно нарязана.	Или нарязвате твърде много храна наведнъж, или не пулсирате правилно. Намалете количеството храна в буркана.
Храната е твърде ситно нарязана или твърде водниста	Храната е била прекалено обработена. За най-добри резултати използвайте кратка мощност.
Не можете да получите сняг от кубчета лед.	За най-добър резултат използвайте лед директно от фризера. Опитайте да използвате кратък режим.
Купата тече	Уверете се, че капакът или ножът са правилно монтирани към буркана. Възможно е да възникне теч, ако са неправилно подравнени при завъртане към буркана. Завъртете капака плътно по посока на часовниковата стрелка.
Уредът не се включва	Уверете се, че устройството е включено в контакта. Уверете се, че ножовете са правилно монтирани към каната и не са разместени.
Уредът не се изключва	Изключете захранващия кабел от електрическия контакт и се обадете на отдела за обслужване на клиенти за поддръжка
Не се смесва добре	За най-добри резултати импулсирайте съставките. Натискайте буркана на кратки интервали за равномерно пасиране и нарязване. За замразени съставки импулсирайте на кратки интервали от 2-5 секунди и повторете.
Капакът/острието не се подравнява правилно с буркана	Поставете буркана върху равна повърхност. Поставете капака или ножчетата върху буркана и подравнете резбите, така че капакът/ножчетата да прилягат равномерно към буркана. Завъртете по посока на часовниковата стрелка, така че капакът/ножчетата да се подравнят равномерно с буркана, докато получите плътно затваряне.

СЪХРАНЕНИЕ НА УРЕДА

- Никога не подменяйте части на уреда. Винаги се обръщайте към оторизирания технически сервиз или към квалифициран електротехник.
 - Никога не навивайте захранващия кабел плътно около уреда. Може да бъде повреден в точката на влизане в уреда, което може да предизвика инцидент и нараняване.
 - Проверявайте често кабела за повреди или нарушаване на изолационното му покритие.
 - Съхранявайте уреда на сухо място. Пазете уреда от деца.
 - Не изпускайте уреда, не го поставяйте на места, от където може да падне.
 - Съхранявайте уреда далеч от източници на топлина - печки, фурни, котлони.
- Пазете далеч от директна слънчева светлина.
- По възможност, съхранявайте уреда в оригиналната му опаковка.

АРТИКУЛ: НУТРИ БЛЕНДЕР
МОДЕЛ: ЕК-2727



Този символ означава, че продукта не трябва да се изхвърля заедно с останалите битови отпадъци, за да се избегне замърсяване на околната среда и нараняване на хора. Отнесете уреда в специализиран пункт за рециклиране на електроуреди.



Всички уреди с марка ЕЛЕКОМ отговарят на БДС!

ЕЛЕКОМ е регистрирана търговска марка за България с №48734 / 02.09.2004 г. от Българското патентно ведомство.
ЕЛЕКОМ е регистрирана търговска марка за Европа с №948329 / 2007- Женева на Световната организация за интелектуална собственост.

Артикул: Нутри Блендер; Модел: ЕК-2727; Производител: Топ Троникс ООД;
ЕИК № 130985327 София, бул. Петко Ю. Тодоров № 4, вх. А, п.к. 1
моб.: (088) 566 70 15, e-mail: elekom@elekom.bg
www.elekom.bg

INSTRUCTION MANUAL

- 2 AS BOTTLES 500 ML, 700 ML - BPA FREE
- SS304 - STAINLESS STEEL BLADES
- BUILT-IN SAFETY LOCK
- BLENDER & GRINDING ATTACHMENT
- MOTOR BASE, DRINK LID, SEAL LID
- EASY CLEANING AND USING

LOW NOISE MOTOR
20000 RPM

PERFECT FOR:

- MILK SHAKES
- SMOOTHIE
- NUTRITION SHAKES
- COCTAILS
- BABY NUTRITION
- SAUCES AND DIP



Power: 700 W
Power Supply:
220-240V, 50-60Hz

BEFORE USING THIS PRODUCT, PLEASE READ THE OPERATING INSTRUCTION CAREFULLY!

ARTICLE: NUTRI BLENDER

MODEL: EK-2727



IMPORTANT SAFEGUARDS

Read the instructions carefully before using the appliance. Use this appliance for its intended purpose. Supplier and manufacturer in no way responsible for any accidents or damages, incidental, special or consequential damages caused by improper use or not use the product as directed. Such damages include, without limitation, loss of savings, income or revenue, loss of profits, the unit useless, claims of third parties and the cost of any spare parts or services related to the repair of the unit.

When using any electrical appliance, especially if it occurs in the presence of children, basic safety precautions should always be followed, including those listed below:

- Keep your device away from water! Do not use near or over water, near bathtubs, showers, pools, basins or other vessels containing water.
- Do not use the appliance outdoors.
- Unplug the appliance from the wall outlet before cleaning.
- Unplug the appliance from the wall outlet after you have finished working with it.
- Never leave the appliance in place where it can fall or fall in a tub or sink.
- Do not immerse in water or other liquids. Do not leave it in a humid place.
- Do not touch the appliance that has fallen into water. Immediately unplug the power cord.
- Do not operate with wet hands or standing on a wet floor. Do not touch plug with wet hands.
- The device should not be left unattended when is plugged in the power network.
- Keep the appliance out of reach of children! Children should be monitored to not play with the appliance.
- Make sure that the voltage of your power network is the same indicated on the appliance or as described in this manual.
- Never leave the appliance in a place where it can fall and be damaged.
- Use this appliance only for its intended purpose, by following the instructions exactly.

Do not use attachments not recommended or provided by producer.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and training, unless they are supervision or instruction concerning use of the appliance person responsible for their safety.
 - Regularly check the condition of the power cord and plug.
 - If the power cord is damaged, it must be replaced by importer, its service agent or a suitably qualifications to avoid danger. Do not disassemble the unit.
 - Protect the power cord from contact with hot surfaces, sharp items.
 - Do not pull or bend the power cord.
 - Do not extend the power cord of the appliance.
 - Do not leave unattended when the appliance is used by, on or near children or invalids.
 - Do not use this product if you feel sleepy.
 - Never drop or insert objects into the openings of the appliance, as this action can lead to electric shock.
 - Do not use the appliance outdoors or in places where used aerosol (spray) products.
- Do not operate the appliance areas with saturated oxygen atmosphere
- This appliance is designed for home use. Do not use for commercial purposes. **HOUSEHOLD USE ONLY!**

WARNING: POTENTIAL INJURY FROM MISUSE. CARE SHALL BE TAKEN WHEN HANDLING THE SHARP CUTTING BLADES, EMPTYING THE BOWL AND DURING CLEANING.

CAUTION: ENSURE THAT THE BLENDER IS SWITCHED OFF BEFORE REMOVING IT FROM THE STAND. SWITCH OFF THE APPLIANCE AND DISCONNECT FROM SUPPLY BEFORE CHANGING ACCESSORIES OR APPROACHING PARTS THAT MOVE IN USE.

ADDITIONAL SAFETY ADVICES

- Route cables in a safe manner so as not to stumble in them.
- Do not unplug by pulling on cord.
- Connect the power plug to an easily accessible socket so that in case of an accident, the device can immediately unplugged from power network
- Unplug from the power socket when you want to completely turn off the unit .
- The unit is under voltage when connected to the power socket.
- If the power cord overheated, stop using the appliance and unplug it from socket.
- Do not use the appliance if any part is damaged in any way. Check the device always before using it to make sure that everything is fine with him.
- Do not replace components of this device to not be exposed to excessive risk. This appliance does not contain any parts that can be replaced or placed in a similar.
- When connecting and using the unit for the first time, it is possible to get smoke (smoking) and a burning smell.
- It is forbidden to disinfect the parts of the appliance with hot water or very hot steam.
- During operation of the appliance, never leave the appliance unattended.
- This appliance is not controlled by timer or remote control.

Check the supply voltage indicated on the appliance if corresponds to the voltage of the power supply!

- Do not touch the blades by hand or a kitchen utensil, while they rotate.
- Never wash the unit main body with running water. Do not immerse in water or other liquids.
- Do not use the food chopper for a long time. Do not allow the motor overheat and follow recommended operating cycle.

Do not let the appliance run for more than 3 minutes at a time. If you have not finished processing after 3 minutes, switch off the appliance and let it cool down to room temperature before you let it run again (more than 1 minutes).

- Always unplug the appliance before you assemble, disassemble or make adjustments to any of the parts.
- To prevent failure of the appliance, make sure that no food or liquid enters the connection point of the blender jar on the motor unit.
- Do not exceed the maximum level indicated on the accessories.
- Never fill the blender jar with ingredients hotter than 80 oC.
- To prevent spillage, do not put more than 1.0L of liquid in the blender jar, especially when you process at a high speed. Do not put more than 0.8L in the blender jar when you process hot liquids or ingredients that tend to foam.
- If food sticks to the wall of the blender jar, switch off the appliance and unplug it. Then use a spatula to remove the food from the wall.
- Never forget to place the sealing ring on the blade unit before you assemble the blender jar, otherwise leakage will occur.
- Always make sure the lid is properly closed/assembled on the jar and the measuring cup is inserted properly in the lid before you switch on the appliance.


The blender is intended for fine pureeing, chopping and blending. With the blender you can prepare soups, sauces, milk shakes and batters. You can also use the blender to process vegetables, fruit and meat.

ARTICLE: NUTRI BLENDER

MODEL: EK-2727



DESCRIPTION OF THE UNIT

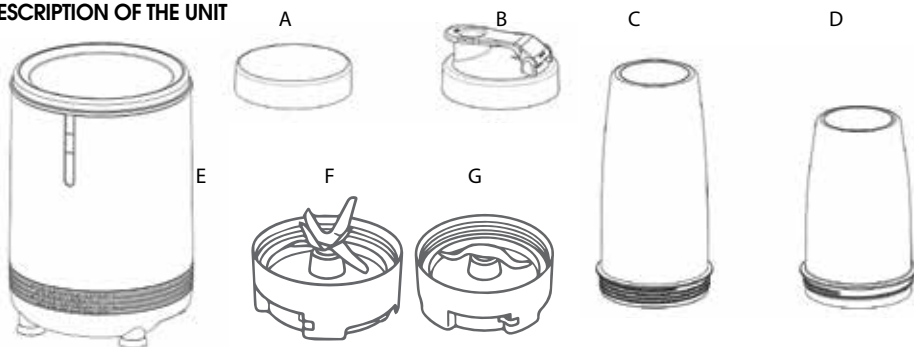

A - Seal Lid

B - Lid for direct drinking

C - Jar 700 ml


D - Jar 500 ml

E - Motor base

F - Attachment for blending

G - Attachment for grinding

ASSEMBLE & DIS-ASSEMBLE OF THE UNIT

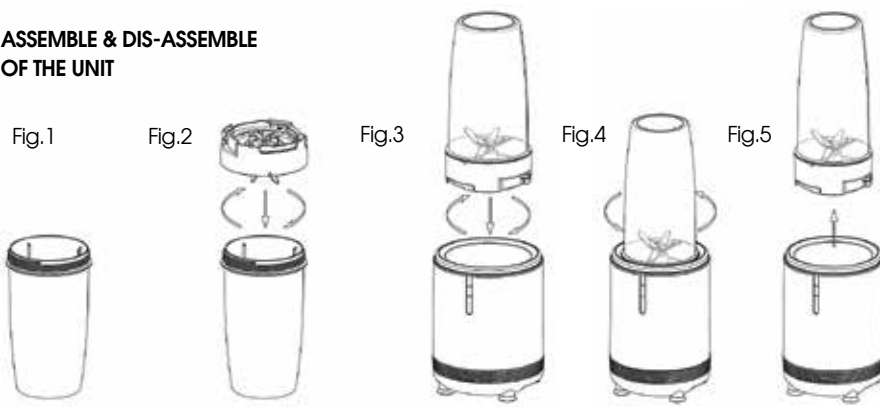

BEFORE FIRST USE

Before using your appliance for the first time, it is important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn in particular to the section dealing with the appliance. Find a safe and convenient place to keep this booklet handy for future reference. This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use. Carefully unpack the Appliance. Remove all packing materials and either discard or retain for future use.

Ensure that the voltage of your electricity supply is the same as that indicated on the rating label of the appliance. Remove the plastic accessories and wash in warm soapy water. Dry thoroughly and replace. Wipe over the exterior of the Motor Base with a damp sponge or cloth. Do not use abrasive cleaners.

PLEASE KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE APPLIANCE:

IMPORTANT: Attachments are interchangeable.

CAUTION: Blades are sharp! Use extreme caution when handling the blade assemblies. Always hold them by the base of the blade assembly.

IMPORTANT: Never run the appliance empty.

CAUTION: Never attempt to remove the jar while the appliance is still running.

WARNING: Never leave the appliance unattended while in use.

USING OF THE UNIT

- 1.Remove all packaging material and labels from the appliance.
- 2.Wash the lids, jars and attachments in warm, soapy water with a soft cloth. Use caution when washing the blade assemblies as the blades are very sharp.
- 3.Rinse and dry thoroughly
- 4.Jars, lids and attachments are all dishwasher safe. It is recommended that the lids and attachments be placed on the top rack. Ensure that the attachments are removed from the jars before placing in the dishwasher.
- 5.Wipe the motor base clean with a damp cloth.

IMPORTANT: Make sure that the motor base is plugged in for use.

1. Place the Motor base on a clean, dry, level surface such as a counter or table top.
2. Make sure the unit is unplugged.
- 3.Add ingredients to the jar.
- 4.Place the blade onto the jar and twist it on tightly until you have a good seal.(Fig. 2)
- 5.Turn the jar upside down and place it onto the motor base, aligning the tabs on the jar with the motor base, aligning the tabs on the jar with the motor base. Turn it clockwise, the unit is ready for use.(Fig. 3)
- 6.When you have reached your desired consistency, stop the appliance by turning the jar counterclockwise(Fig. 4) and pull straight up to remove(Fig. 5).

NOTE: Do not overfill! To avoid spilling, do not add ingredients past the „Max“ fill line.

- 7.Turn the jar upright and remove the Blade Assembly by twisting the blade assembly counterclockwise. Be sure to store the Blade Assembly attached to an empty jar when not in use.
- 8.Place the Sip & Seal lid onto the jar, twist to seal and enjoy!
- 9.Make sure that the motor base is unplugged when not in use.

SAFETY FEATURES

Built-in safety lock

The blender has a built-in safety lock feature, this ensures that you can only switch on the appliance while the cup and the blade subassembly are assembled on the motor base securely. If the appliance is correctly assembled, the built-in safety lock will be unlocked.

IMPORTANT: In the base of each blade's collar, there is a silicone gasket seal that creates an airtight fit with the jars. After dishwashing and before each use, always check to make sure the gasket is properly in place, as the heat from some dishwashers may cause the gasket to become loose.

WARNING: Do not operate the motor continuously for more than 60 seconds at a time. Allow the motor to rest for 180 seconds before continuing.

NOTICE: If the blade is not running smoothly, stop the product and add some liquid, or reduce the ingredients in the cup.

NOTE: To prevent product overheating, dry ingredients must not be processed for more than 30 seconds at a time.

PROBLEM	POSSIBLE REASONS & SOLUTIONS
Motor doesn't start or attachment doesn't rotate	For the jars, make sure that the tabs are seated in the slots and turned clockwise
Jar is leaking	Make sure that your lid or blade assembly is properly assembled to the jar. Leaking may occur if it is misaligned when twisted onto the jar. Turn the lid tightly clockwise.
Unit doesn't turn on	Make sure the unit is plugged in. Make sure the blade assembly is properly assembled to the jar and that is not misaligned
Unit doesn't turn off	Unplug the power cord from the electrical outlet and call customer service for support
Lid/blade assembly will not properly align to the jar	Set the jar on a level surface. Place the lid or blade assembly on top of the jar and align the threads so that the lid/blades sit flat on the jar. Twist clockwise so that the lid/blades evenly align to the jar until you have a tight seal.
Motor doesn't start or attachment doesn't rotate	For the jars, make sure that the tabs are seated in the slots and turned clockwise
Food is unevenly chopped.	Either you are chopping too much food at once, or you are not pulsing properly. Reduce the amount of food in the jar.
Food is too finely chopped or too watery	The food has been over processed. Use short operating for best results.
You can not achieve snow from ice cubes.	For best result use ice straight from the freezer. Try using short operating instead of long one. Make sure the jar is completely dry before adding ice.

CAUTION:

1) Do not immerse the motor unit in liquid to prevent the risk of electric shock.

2) Do not use rough scouring pads or cleansers on parts or finish.

3) Do not place engine base into dishwasher for cleaning. This unit is not available for dishwasher.

CARE & MAINTENANCE
HOW TO CLEAN

CAUTION: Make Sure that the motor base is unplugged from the power source before inserting or removing any attachment and before cleaning.

NOTICE: Wait until the blender has cooled down sufficiently before cleaning it.

CAUTION: DO NOT immerse the motor base into water or any liquid, or place into a dishwasher.

1. Separate/remove all parts from each other.

2. Clean the motor base with a slightly damp cloth and wipe dry

3. Place jars in the dishwasher. Place the lids and attachments on the top rack. Use caution when handling

ARTICLE: NUTRI BLENDER

MODEL: EK-2727



the blade assemblies as the blades are very sharp.

4. Whenever possible, rinse parts immediately after processing to make cleanup easier.

5. Store the product in a cool, dry place. NOTE:

You may also wash the jars by filling the jar to the Max fill line with warm water and drop of dish washing detergent, placing the blade assembly on the jar and pulsing a few times. Do not fill the jar more than Max fill line with water because it will overflow. Once clean, remove the jar from the motor base. Rinse the jar, attachment and lid under running water. Allow all the parts to dry before storing.

Do not use scouring pads, abrasive cleaning agents or aggressive liquids such as petrol, alcohol or acetone to clean the appliance

All detachable accessories can be cleaned in dishwasher.

TIPS:

Use a small brush(not included) to remove particles of food lodged underneath the blades.

If some leftover particles dry onto the inside of the jar, fill the cup about 2/3 full with warm water and attach the blade subassembly. Place the jar and blade subassembly onto the motor base and operate the appliance for about 20-30 seconds to help loosen the stuck ingredients. Repeat the above step but use clean tap water. Empty blender and dry thoroughly.

CAUTION: Do not try attempt to remove blades from the Blade subassembly for cleaning.

HOW TO STORE

1. Store the appliance upright. Do not place anything on top. Store the jars and the rest of the attachments along side the appliance where they will not be damaged and won't cause a hazard.

2. Remove and empty the jar and ensure that no food is jamming the cutting blades.

3. Allow the appliance to cool for approximately 30 minutes.

4. Re-install the jar onto the base and re-plug the appliance into the electric outlet.



This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



ELEKOM IS REGISTERED TRADE MARK FOR EUROPE WITH PATENT №948329/2007 -

GENEVA FROM WORLD INTELLECTUAL PROPERTY ORGANIZATION

ELEKOM IS REGISTERED TRADE MARK FOR BULGARIA WITH №48734/2004 FROM
BULGARIAN PATENT DEPARTMENT ORGANIZATION

Article: Nutri Blender; **Model:** EK-2727

Manufacturer: Top Troniks LTD; VAT № 130985327

Bulgaria; Sofia, Petko Y. Todorov № 4, Ent.A, p.b.1

Contacts: +359 (088) 566 70 15, **E-mail:** elekom@elekom.bg,
www.elekom.bg

РЕЦЕПТИ ЗА СМУТИ НУТРИБОМБИ

BG

Когато започвате с Нутрибомбите, използвайте зеленчуци с мек вкус като спанак или пролетни зеленчуци. Плодовете, които добавите, лесно ще замаскират вкуса им и ще направят напитката вкусна и свежа. Експериментирайте с количеството вода, за да получите най-добрата консистенция. Колкото повече вода използвате, толкова по-течна ще е напитката и обратното. Внимавайте никога да не превишите максималната линия (MAX). Може да заместите водата с ядково мляко, без добавени захари и консерванти, кокосова вода, кокосово мляко, и не се страхувайте да проявите творчеството. Използвайте Гайда, за да създадете свои комбинации. Храни се добре, Живей добре!

СМУТИ ДЕТОКС

- 1-2 шепи измит спанак
- 1 почистена круша
- 1 банан
- 1 почистена ябълка
- 1 чаша ананас
- Вода

ИМУНО БУСТЕР

- 1-2 шепи измити пролетни зеленчуци
- 1 банан
- 1 обелен портокал
- 1 чаша ананас
- 1 шепи сини боровинки
- Вода

ДОБРО УТРО

- 1 банан
- 1 обелен портокал
- 1 чаша ананас
- 1 шепи сини боровинки
- Вода

ШОКО АВОКАДО

- 1 авокадо
- 1/2 банан/или фурни 3-4
- шоколадови люспи (черен 70% какао)
- 1 чаша бадемово мляко
- 1/8 чаша бадеми
- Вода

ТОНИК ЗА Ч.ДРОБ

- 1-2 шепи измито зеле кейл
- 1 банан
- 1 чаша ананас
- 1 чаша червено грозде
- 1/4 чаша конопени семена
- Вода

ИЗКУШЕНИЕ

- 1-2 шепи измит спанак
- 1 банан
- 1 чаша ягоди
- 1 чаша пъпеш медна роса
- 1/8 чаша орехи
- Вода



ЕНЕРГИЕН СТАРТ

- 1 чаша пълеш медна роса
- 1 чаша диня
- 1 банан
- 1/8 чаша годжи бери
- Вода

СМУТИ АНТИОКСИДАНТ

- 2 чаши къдрава маруля
- 1 банан
- 1 портокал
- 1 чаша ананас
- 1 чаша манго
- 1/8 чаша бадеми
- Вода

СМУТИ ТРОПИК

- 2 шепи зеленолистни
- 1 авокадо
- Сок от 1/2 лимон
- 1 чаша манго
- 1 чаша папая
- 1/4 чаша тиквени семки
- Вода (кокосова вода)

ПРАСКОВЕН БУСТЪР

- 1-2 шепи измито зеле кейл
- 1 праскова без костилка
- 1 банан
- 1 шепя ягоди
- 1/8 чаша ленено семе
- Вода

КАНЕЛЕН БАДЕМ

- 1 банан
- 10 бадема
- 1 с.л. кокосово масло
- 1/2 с.л. канела
- 1 чаша бадемово мляко

СМУТИ ПРОТЕИН

- 2 шепи зеленолистни
- 1 авокадо
- 1 чаша малини
- 1 портокал
- 1 чаша манго
- 1/8 чаша кашу
- Вода

СМУТИ ЗЕЛЕНА СЛАДОСТ

- 1-2 шепи спанак „бейби“
- 1 банан
- 1 чаша почистен ананас
- 1 ябълка
- 1 чаша сини боровинки
- 1/8 конопено семе белено
- Вода

БОРОВИНКОВО СЕЛЪРИ

- 1 голям банан
- 1/4 замразени боровинки
- 3 резенчета сельри
- 1 ч кокосова вода



NUTRIBLAST RECIPE IDEAS!

TOXIN CLEANSING BLAST

Flush toxins from your body with this delicious, fruity concoction

- 1-2 handfuls of rinsed spinach
- 1 cored pear
- 1 banana
- 1 cored apple
- 1 cup of pineapple
- water

VITA-BERRY BLAST

Ward off cancer, heart disease, and viruses with this sweet and tasty blast of flavonoids!

- 1-2 handfuls of rinsed spinach
- 1 cup of blueberries
- 1 banana
- 1 handful strawberries
- water

CINNAMON ALMOND

- 1 banana
- 10 almonds
- 1 tbsp coconut oil
- 1/2 tsp cinnamon
- 1 cup almond milk

PROTEIN

- 2 handfuls of leafy greens
- 1 avocado
- 1 cup raspberries
- 1 orange
- 1 cup mango
- 1/8 cup cashews
- Water

THE IMMUNE BOOSTER

Keep healthy even during flu season with this delicious elixir

- packed with antioxidant goodness
- 1-2 handfuls of rinsed spring greens
- 1 banana
- 1 peeled orange
- 1 cup of pineapple
- 1 handful of blueberries
- water

MORNING GLORY

Start your day with boundless energy with this flavorful blend

- 1-2 handfuls spinach
- 1 avocado
- 1 cup strawberries
- 1 cup mango
- 1/4 cup goji berries
- water

PEACH BOOSTER

- 1-2 handfuls washed kale
- 1 pitted peach
- 1 banana
- 1 handful strawberries
- 1/8 cup flaxseed
- Water

TROPIC

- 2 handfuls of leafy greens
- 1 avocado
- Juice of 1/2 lemon
- 1 cup mango
- 1 cup papaya
- 1/4 cup pumpkin seeds
- Water (coconut water)



ENERGY KICK

- 1 cup honeydew melon
- 1 cup watermelon
- 1 banana
- 1/8 cup goji berries
- Water

SMOOTHIE GREEN SWEETNESS

- 1-2 handfuls baby spinach
- 1 banana
- 1 cup pureed pineapple
- 1 apple
- 1 cup blueberries
- 1/8 hemp seeds, hulled
- Water

PEANUT BUTTER & BANANA PROTEIN SMOOTHIE

Liquid: $\frac{1}{2}$ cup milk or oat milk-
Base: $\frac{1}{2}$ frozen banana (adds
a great, thick texture)Protein/
Fat: $\frac{1}{2}$ tbsp peanut or almond
butter, $\frac{1}{2}$ cup vanilla Greek
yogurtBoost: $\frac{1}{2}$ tbsp ground
flaxseed, $\frac{1}{2}$ scoop protein
powder (optional)Instructions:
Blend all ingredients together
until smooth and creamy.

ANTIOXIDANT BERRY-OAT POWER SMOOTHIE

Liquid: $\frac{1}{2}$ cup almond or
soy milkFruits: $\frac{3}{4}$ cup
frozen mixed berries, $\frac{1}{2}$ ripe
bananaFiber: $\frac{1}{2}$ tbsp jumbo
rolled oats (use gluten-free if
necessary)Boost: $\frac{1}{2}$ tsp mixed
seeds (like flax, pumpkin, or sun-
flower seeds), $\frac{1}{2}$ tsp cashew
or almond butter

BLUEBERRY CELERY

- 1 large banana
- $\frac{1}{4}$ frozen
blueberries
- 3 celery slices
- 1 tsp coconut water

TEMPTATION

- 1-2 handfuls of washed
spinach
- 1 banana
- 1 cup strawberries
- 1 cup honeydew melon
- $\frac{1}{8}$ cup walnuts
- Water

CHOCO AVOCADO

- 1 avocado
- $\frac{1}{2}$ banana/or dates 3-4
- chocolate chips
(dark 70% cocoa)
- 1 cup almond milk
- $\frac{1}{8}$ cup almonds
- Water

THE ULTIMATE GREEN SMOOTHIE

An energizing and refreshing
classic packed with vitamins,
fiber, and healthy fats.

Liquid: $\frac{1}{2}$ cup unsweetened
almond milk

Greens: $\frac{1}{2}$ cups fresh baby
spinach

Fruits: $\frac{1}{2}$ banana, $\frac{1}{2}$ cup
frozen mango chunks, $\frac{1}{2}$
cup frozen pineapple chunks-

Boost: $\frac{1}{2}$ tbsp chia seeds or
almond butterInstructions: Blend
the liquid and greens first until
completely smooth, then add the
fruit and seeds and blend again.

